











Інструкція з монтажу ліжка Бантик та Хмаринка

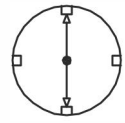




90
MIN





ІНСТРУКЦІЯ !

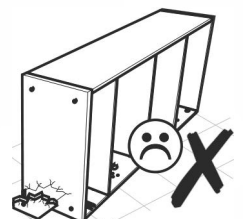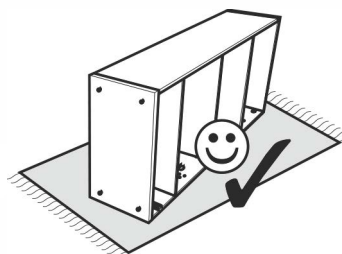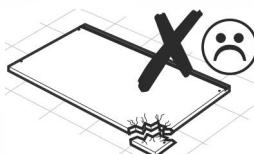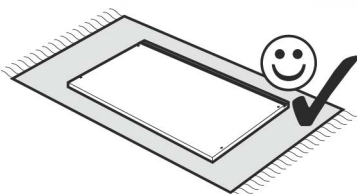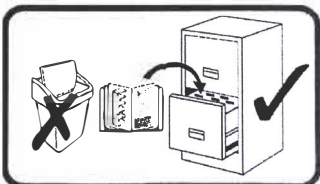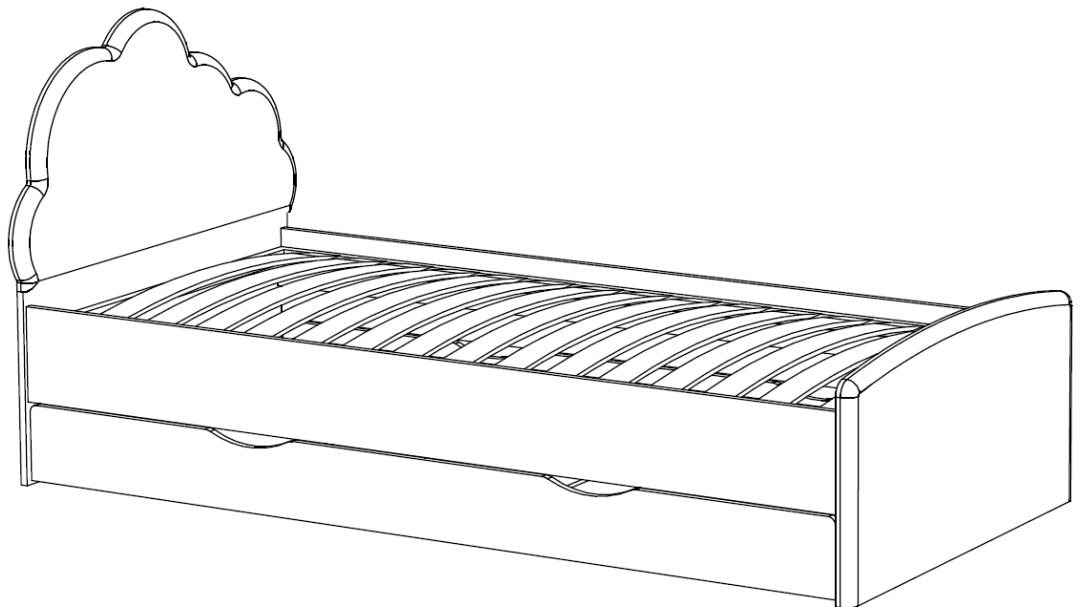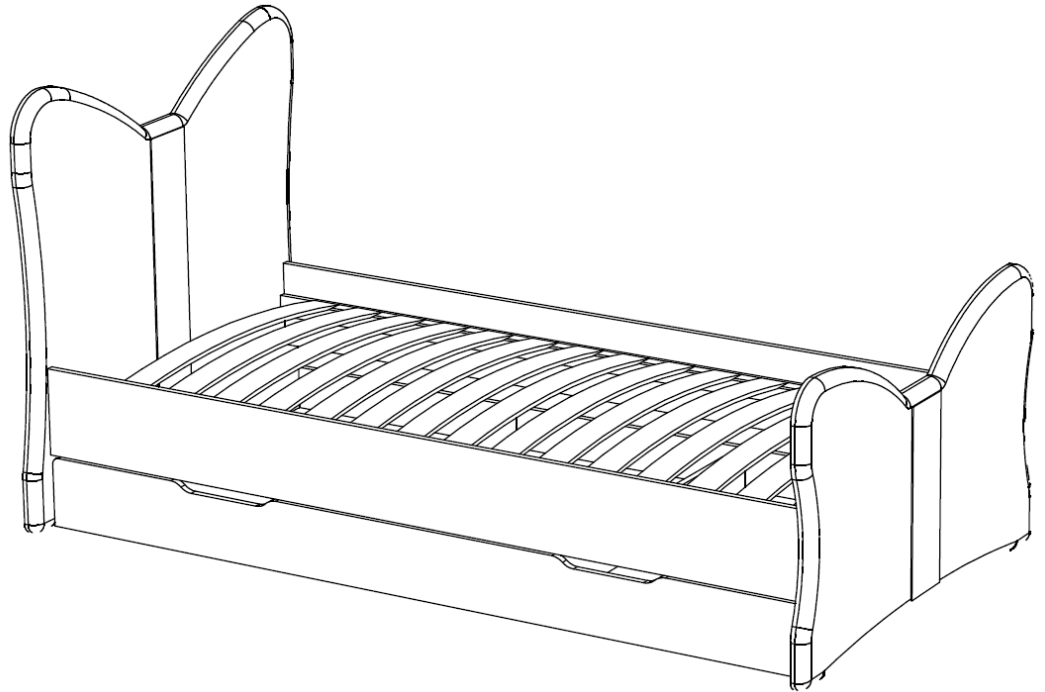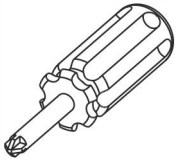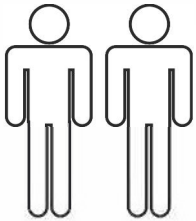

Перелік фурнітури

(B03)  x8	(B1)  x8	(E1)  x16
(D0)  3,0x15 x70	(D1)  3,5x16 x60	(Z)  x1
(D2)  3,5x30 x12	(K1)  x4	(R1)  x8
(Z1)  x8		

MM

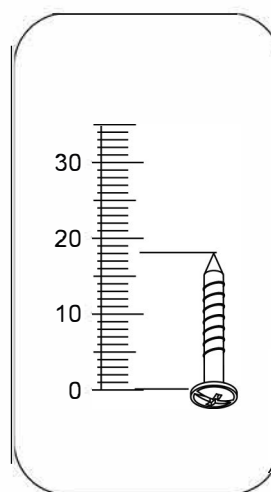






Перелік деталей

ХМАРИНКА







1	1000 x 950	1
2	950 x 500	1
3	1900x200	2
4	1890 x 160	1
5	1798 x 100	2
6	895 x 100	2
7	863 x 100	2
8	610 x 890	3
9	1900 x 900	1




БАНТИК

1	1050 x 1000	1
2	1050 x 600	1
3	1900x200	2
4	1890 x 160	1
5	1798 x 100	2
6	895 x 100	2
7	863 x 100	2
8	610 x 890	3
9	1900 x 900	1

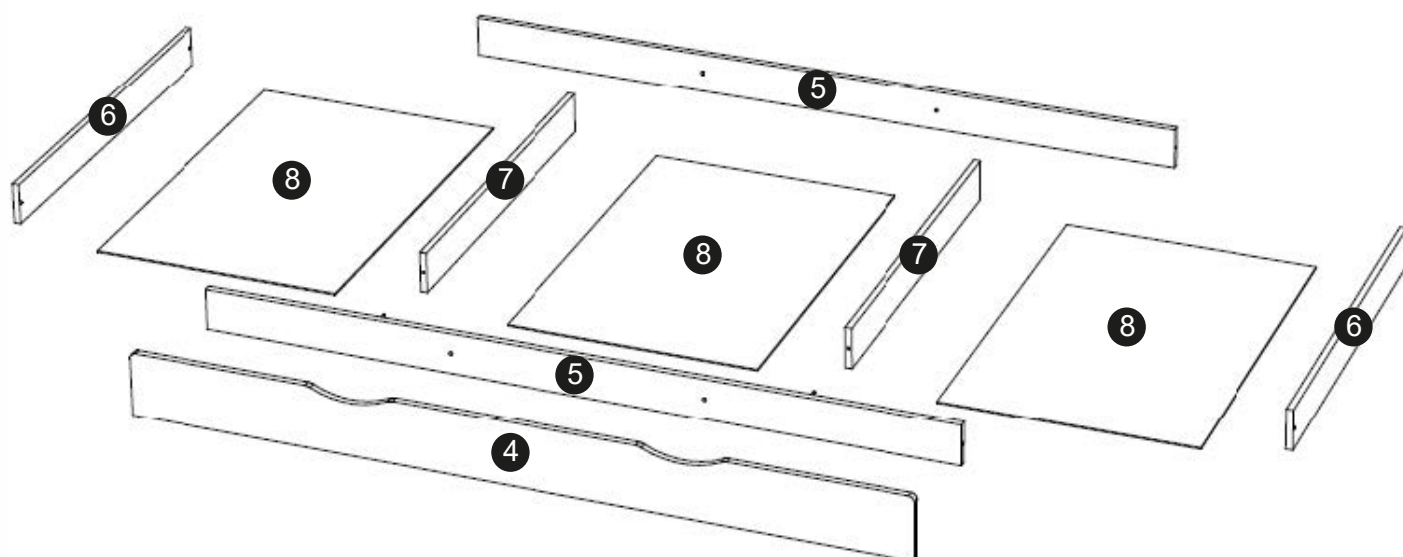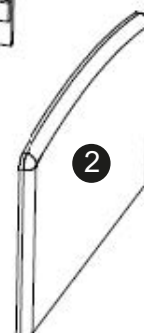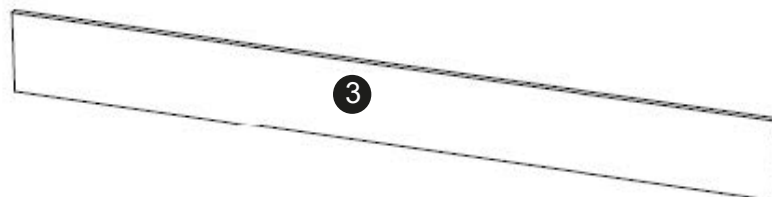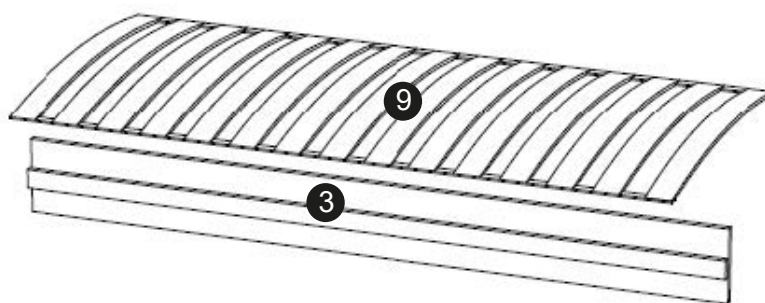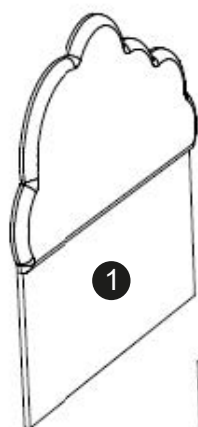




1

B03  x8	B1  x8	Z  x1
D0  3,0x15 x70	 	
E1  x16		

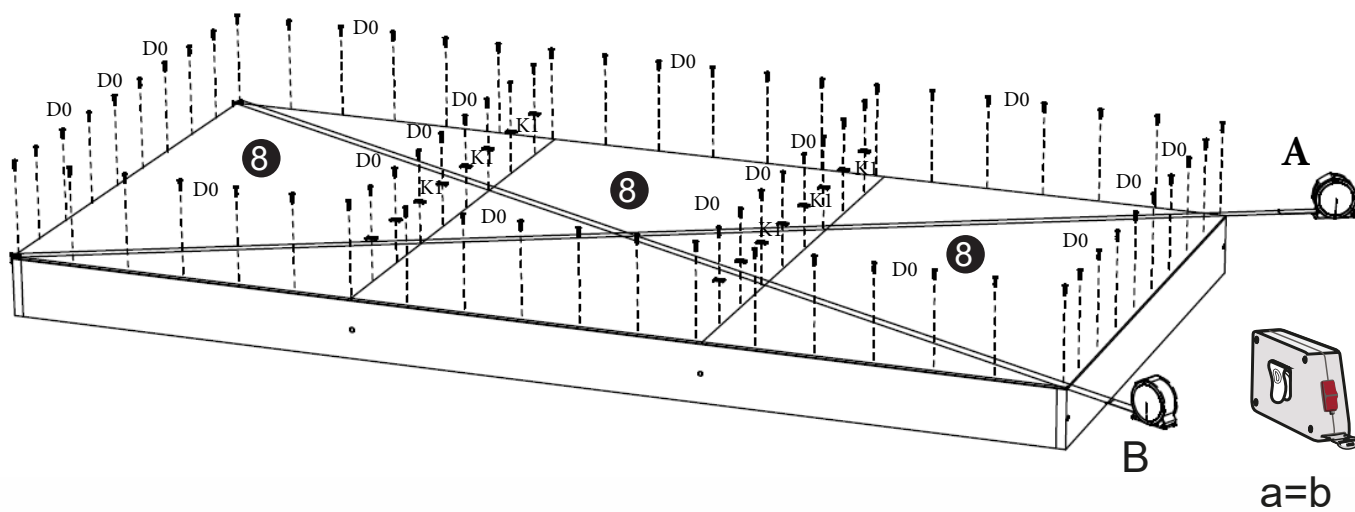
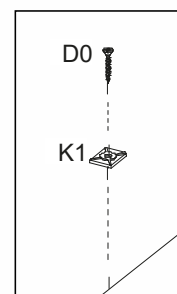
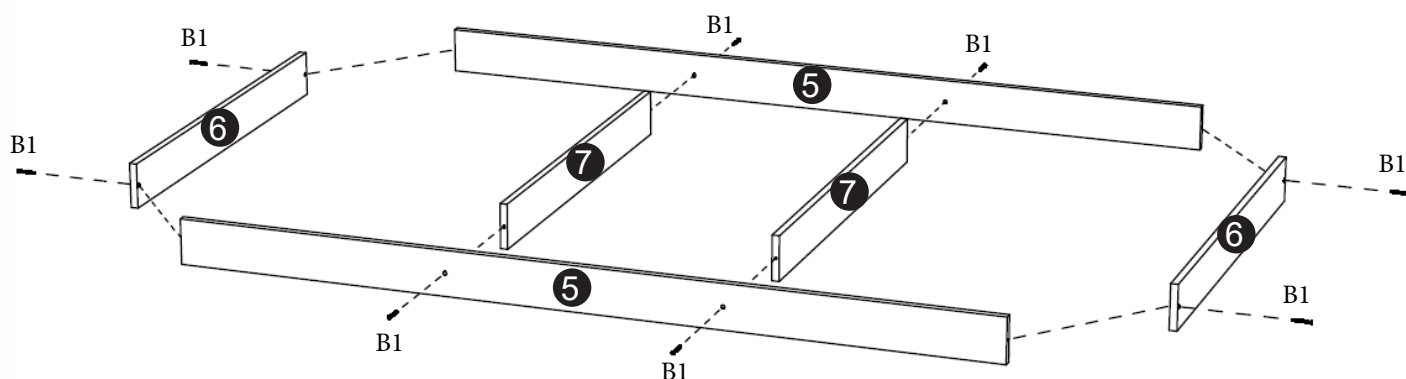


Увага! Перед монтажем листів ДВП обов'язково перевірити діагональ ящика рулеткою! Довжина "А" має відповідати довжині "Б"


2

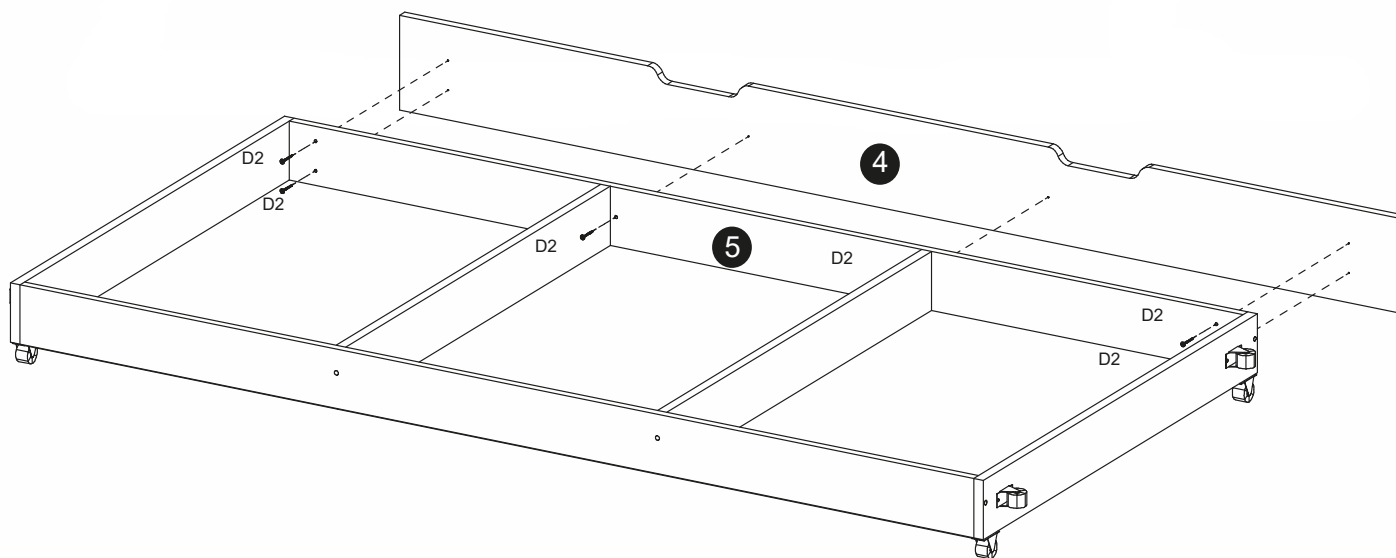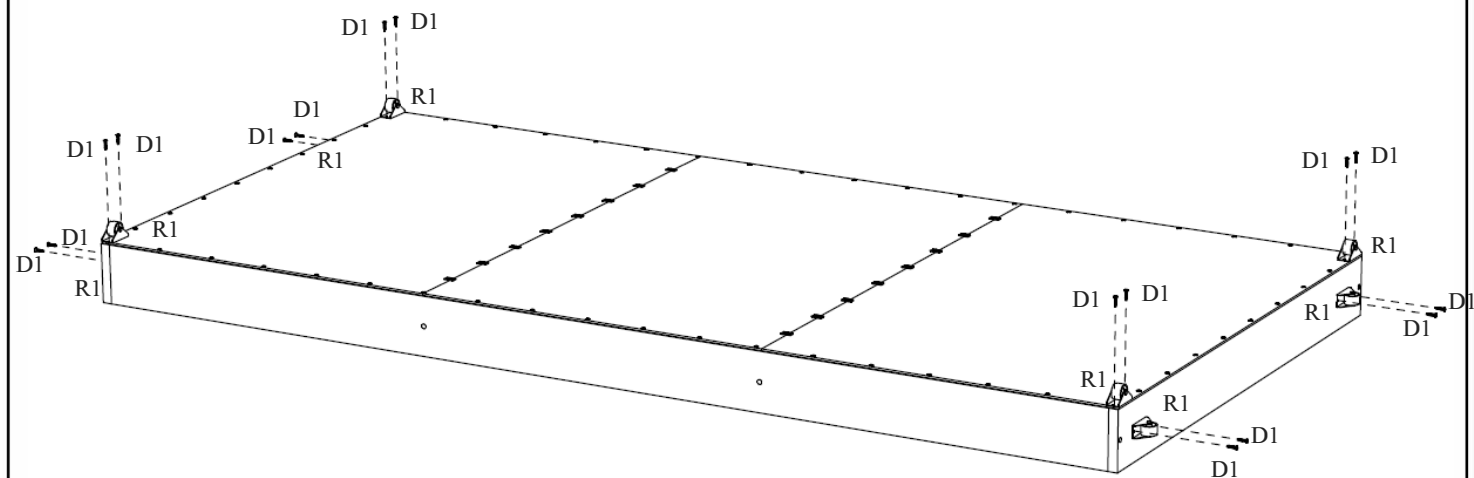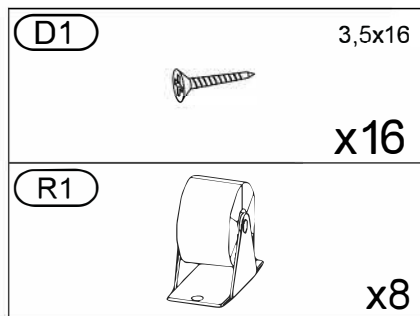


3

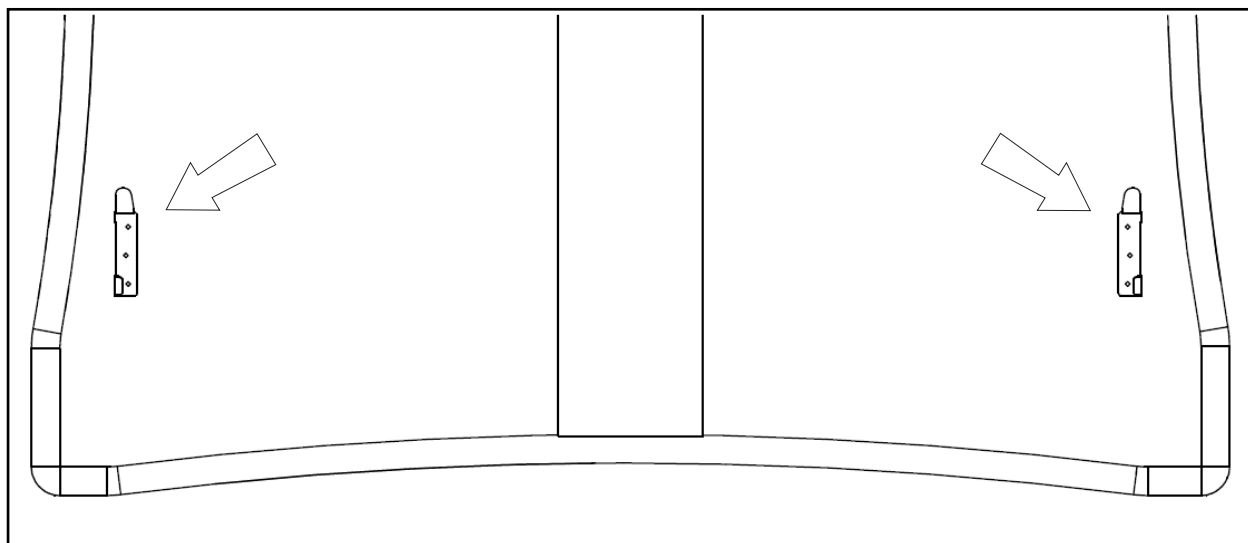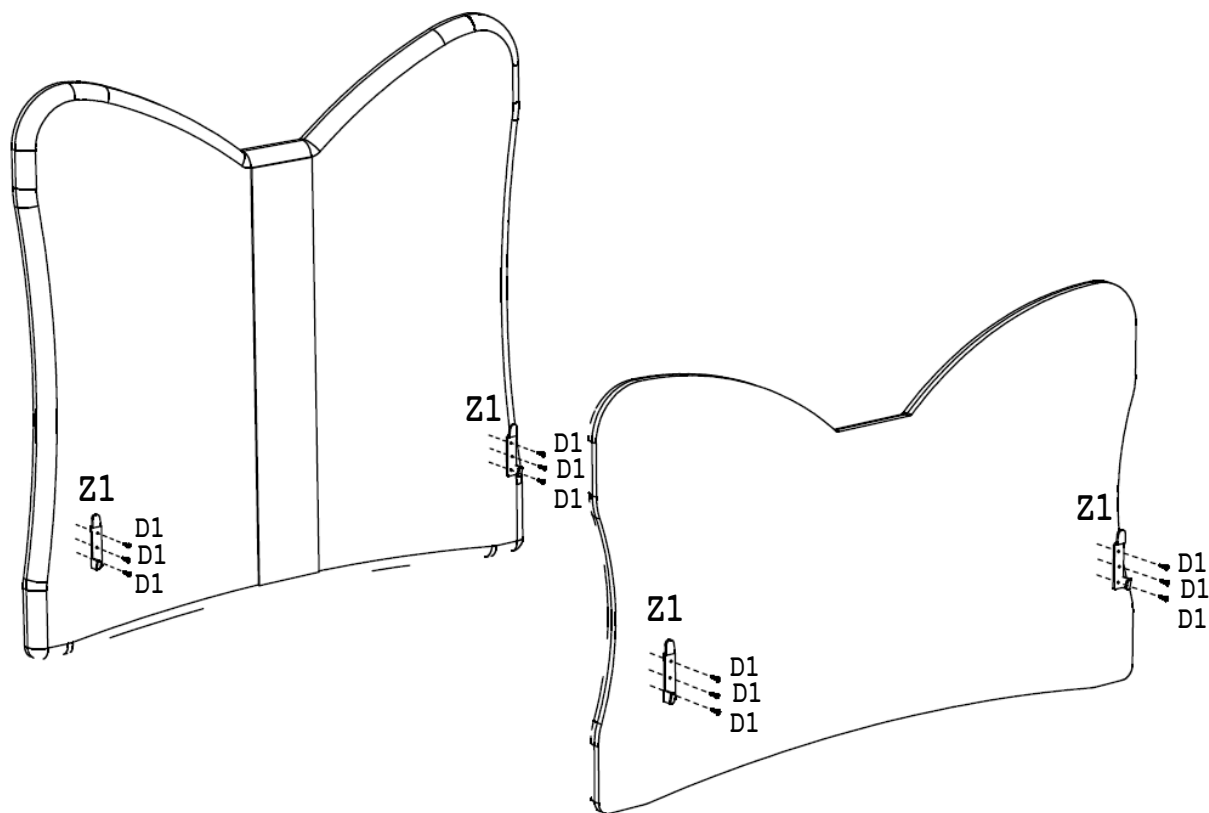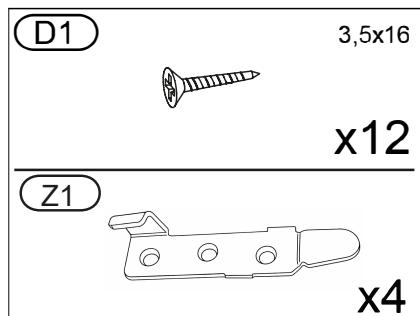

4

D1	3,5x16	K1
	x32	 x4

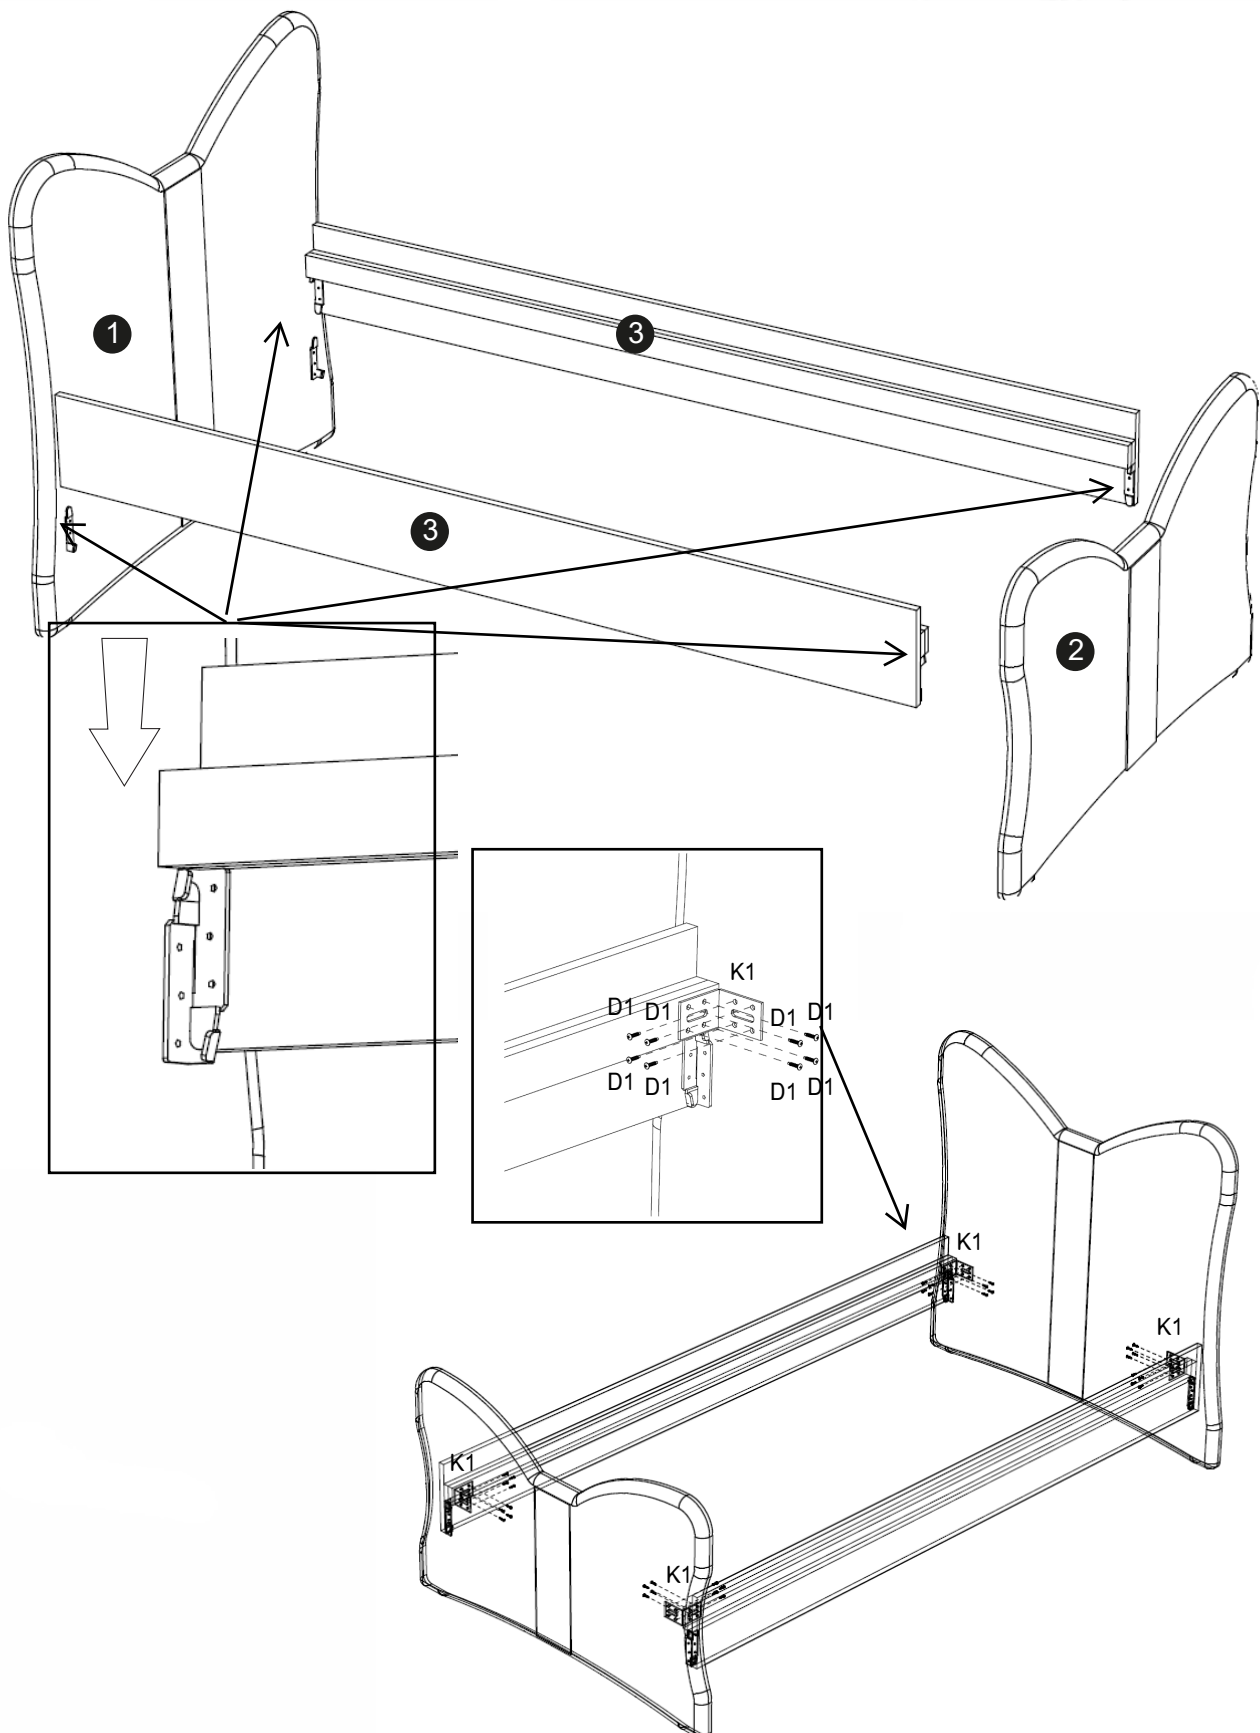

5

