










Інструкція з монтажу












ІНСТРУКЦІЯ !

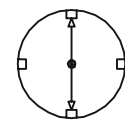


90
MIN

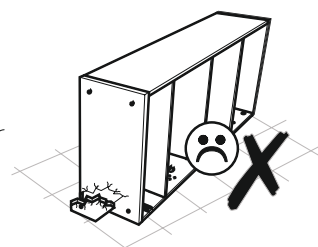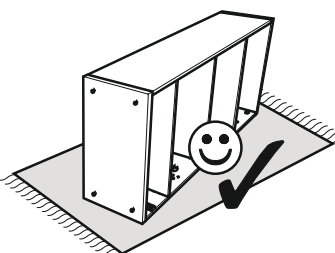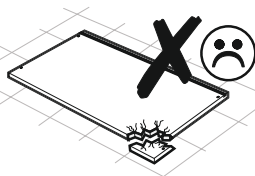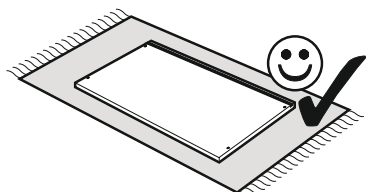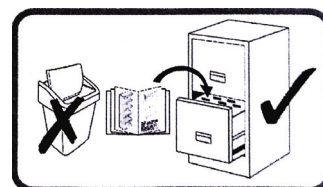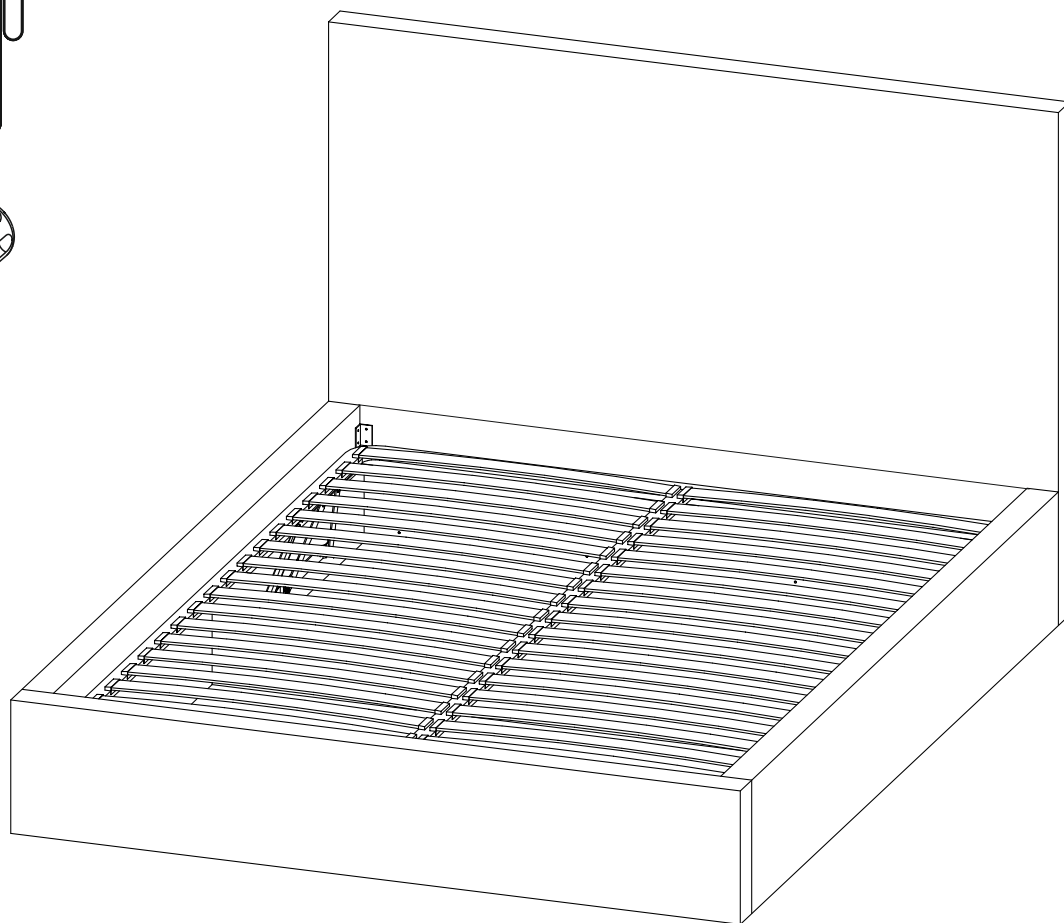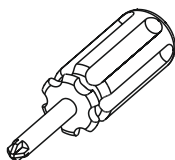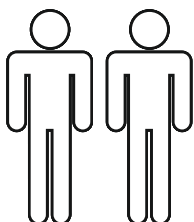

Перелік фурнітури

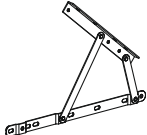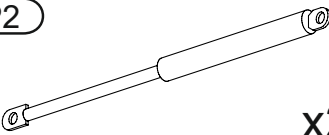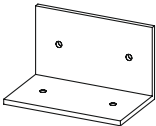B1  x12	B2  8x60 x6	B3  x4	MM 240 230 220 210 200 190 180 170 160 150 140 130 120 110 100 90 80 70 60 50 40 30 20 10 0
B4  8x60 x6	D0  3,0x15 x60	D1  3,5x16 x10	
D2  3,5x25 x16	D3  3,5x35 x35	D4  5,5x25 x6	
E1  3,5x25 x10	E2  x10	E3  x2	
P1  x2	P2  x2	K1  x2	
Z  x1			

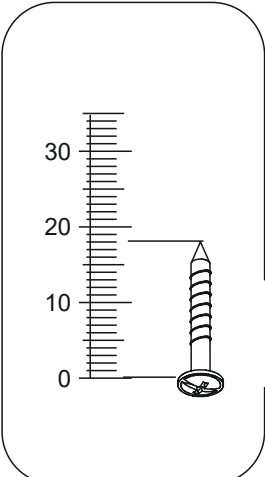

Розміри спальних місць

1400x2000


①	Спинка	1
②	Узніжжя	1
③	Царга	2
④	2020 x 220	2
⑤	1388 x 220	1
⑥	1388 x 220	1
⑦	1388 x 180	1
⑧	1620 x 1010	2
⑨	Ламелі	1

1600x2000


①	Спинка	1
②	Узніжжя	1
③	Царга	2
④	2020 x 220	2
⑤	1588 x 220	1
⑥	1588 x 220	1
⑦	1588 x 180	1
⑧	1620 x 1010	2
⑨	Ламелі	1

1800x2000



①	Спинка	1
②	Узніжжя	1
③	Царга	2
④	2020 x 220	2
⑤	1788 x 220	1
⑥	1788 x 220	1
⑦	1788 x 180	1
⑧	1620 x 1010	2
⑨	Ламелі	1


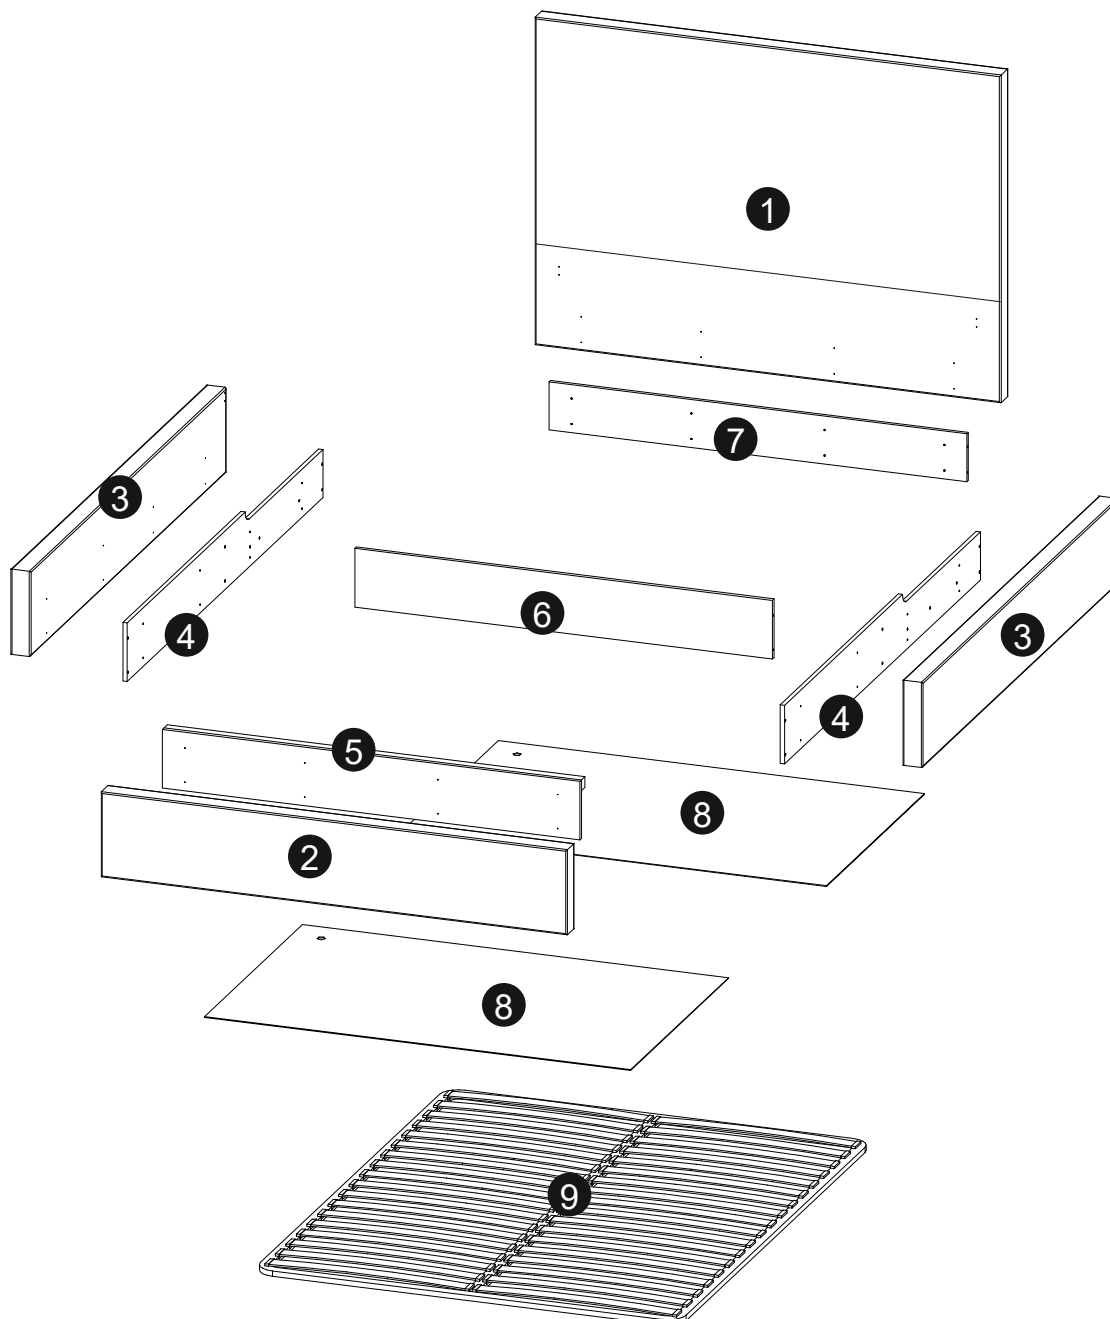


 B1 x12	 B3 x4	 Z x1
 P1 x2	 P2 x2	


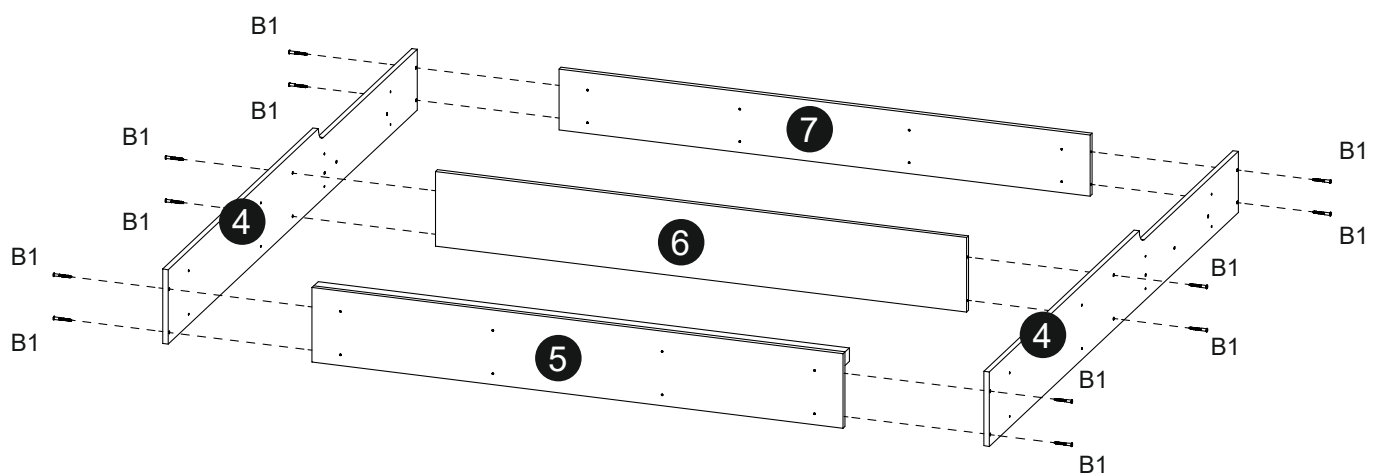




2

D0  3 x 15 mm x60	E1  3,5x25 x10	E2  x10
--	--	---

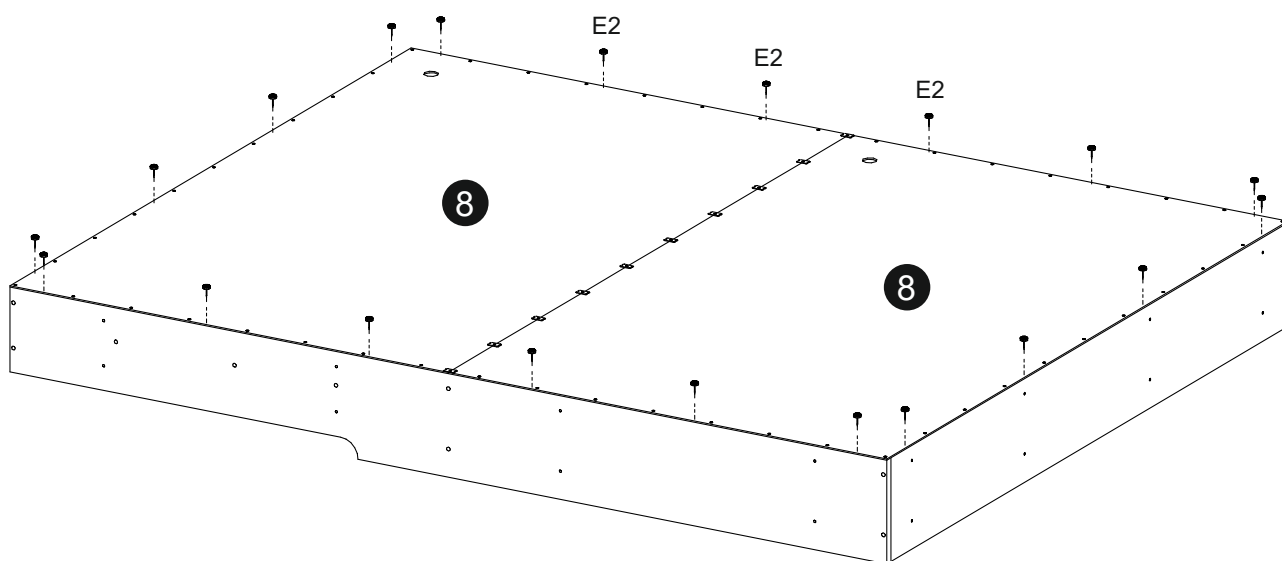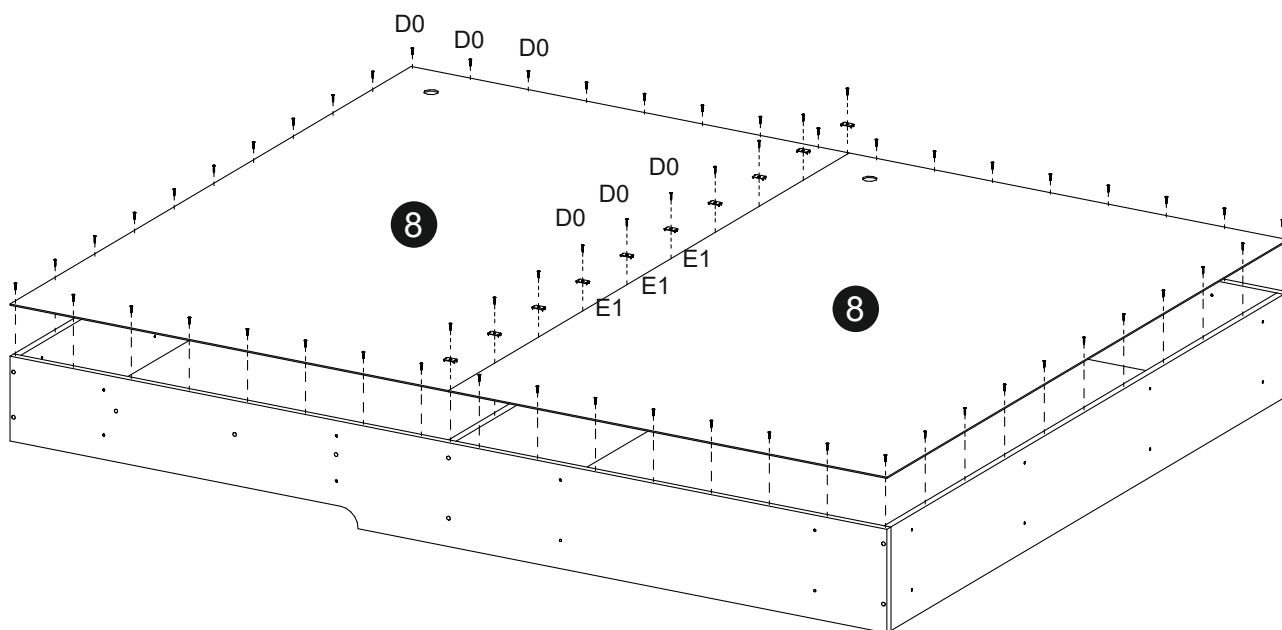




3

P1  x2	B2  x6	B4  x6
D3  x16	E3  x2	

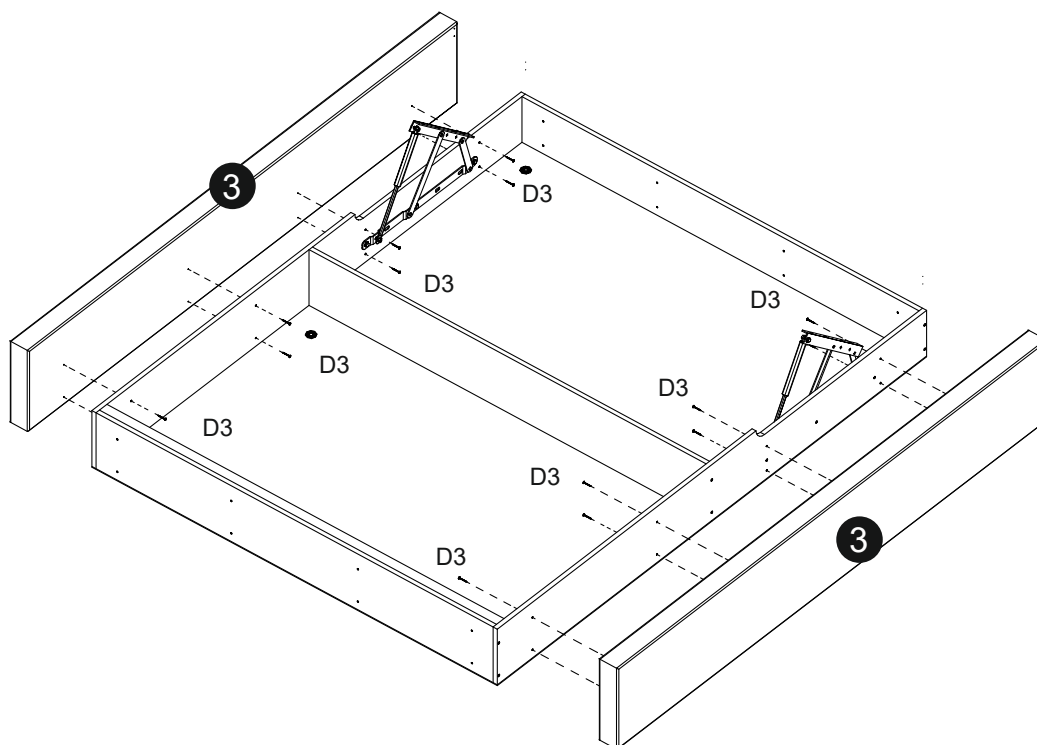
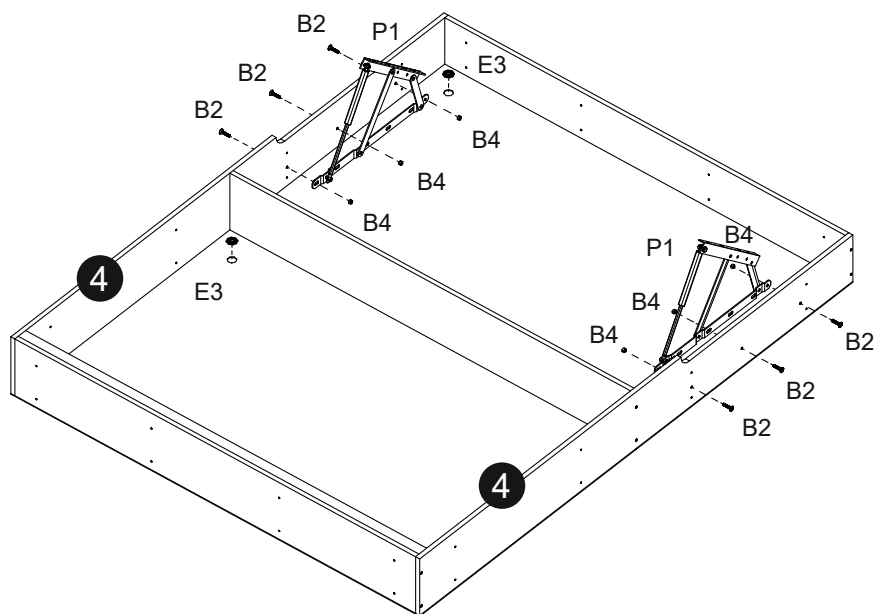


4

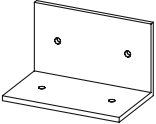D1  3,5x16 x8	D3  3,5x35 x16	K1  x2
--	---	--

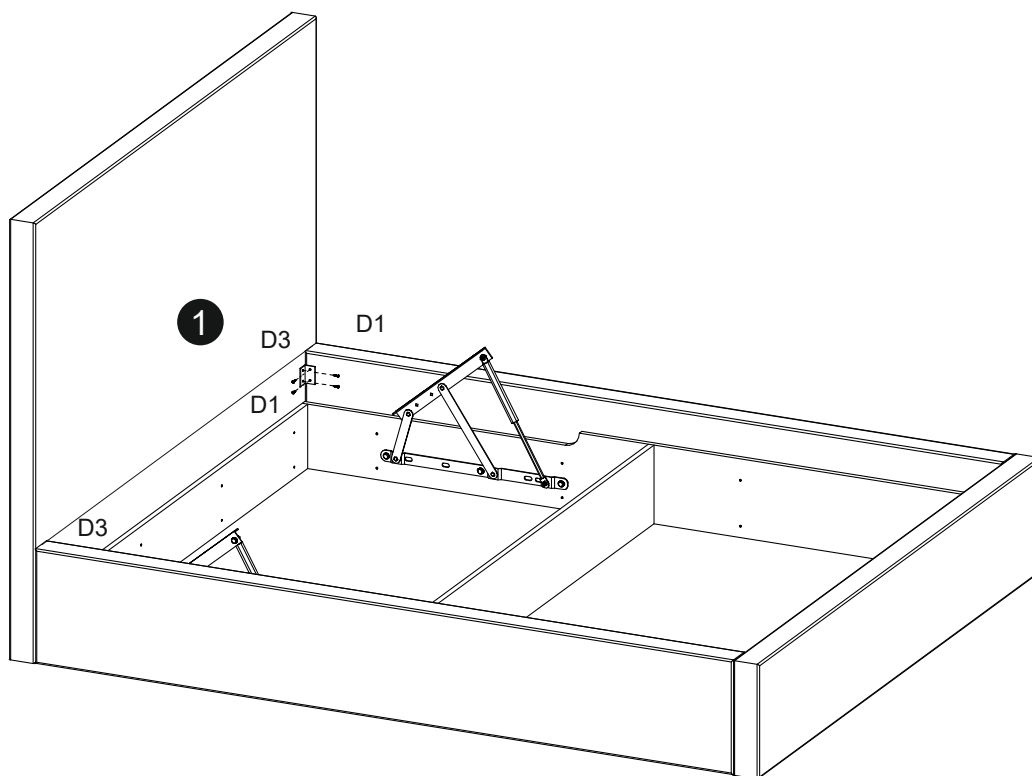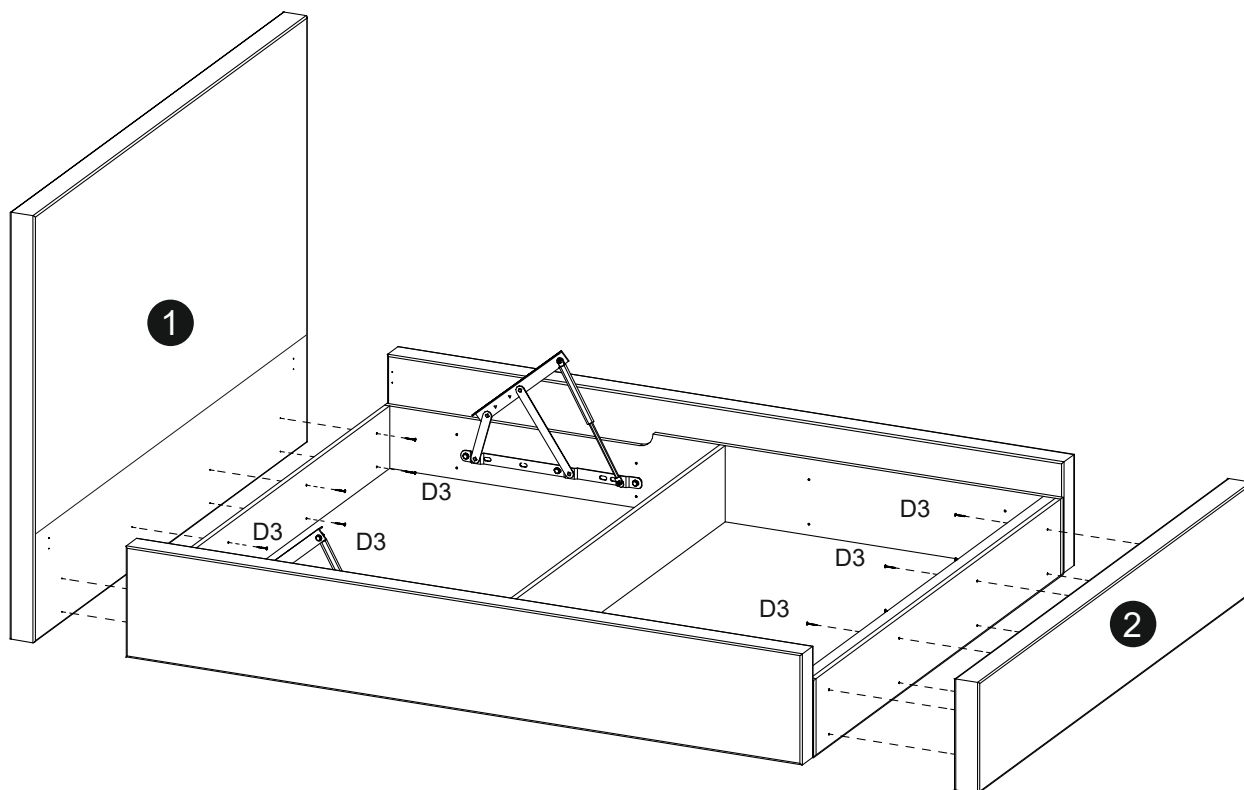

5

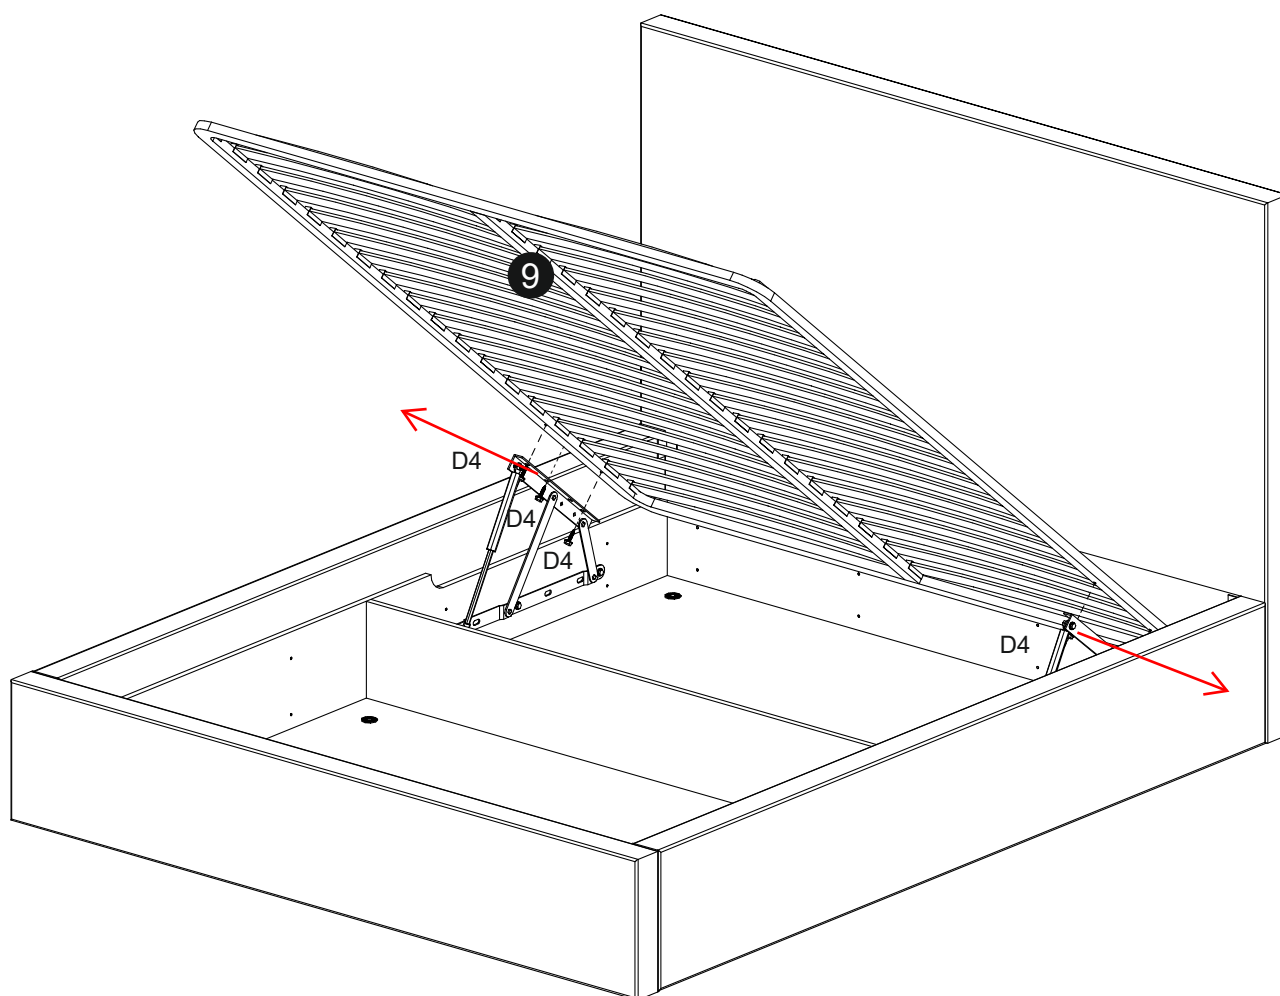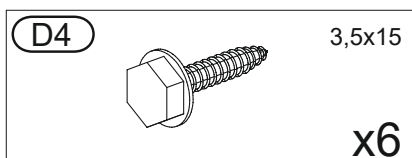

Увага! При кріпленні ламелей до механізмів , потрібно подати (натягнути) самі механізми назовні , так щоб отвори з ламелями співпали, та зафіксувати саморізами по металу