

ІНСТРУКЦІЯ !

KOMOD DRIVE 4L

90
MIN

1

KOMOD DRIVE 4L

B1 x28	B03 x28	D0 3,0x16 x40
D1 3,5x16 x44	D2 3,5x30 x16	D3 x8
N x8	R1 x4	K1 x2
Z x1		

2

KOMOD DRIVE 4L

1	1140 x 450	1
2	1140 x 450	1
3	610 x 500	1
4	572 x 80	3
5	572 x 80	2
6	1060 x 600	1
7	445 x 150	8
8	514 x 150	4
9	514 x 150	4
10	540 x 440	4
11	600 x 262	4

x4

FRONT

3

1

D1

3,5x16

x16




N

x8


FRONT

4

2

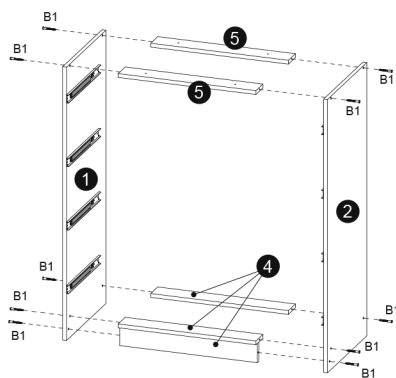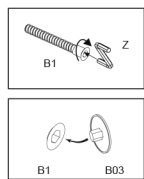
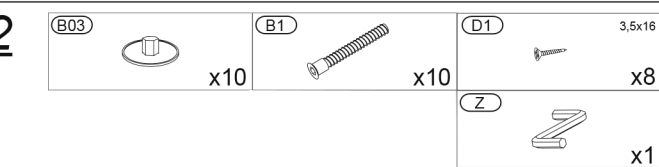


Увага! Після монтажу обов'язково зафіксувати комод металевими кутниками до вертикальної або горизонтальної поверхонь щоб уникнути перекидання!








5

3

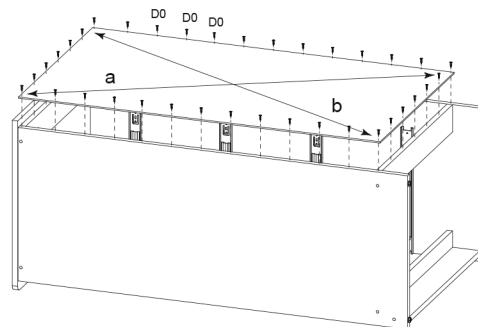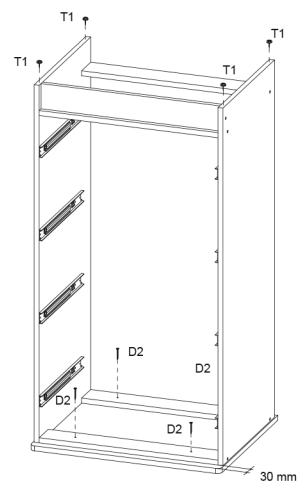


6

4

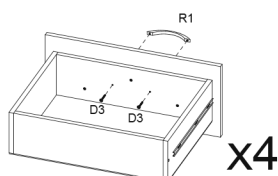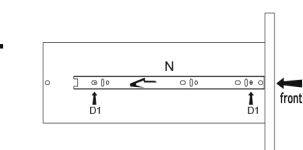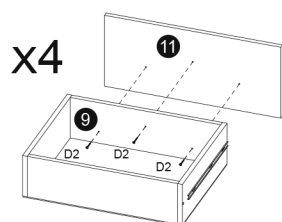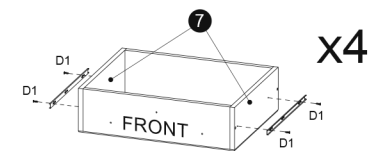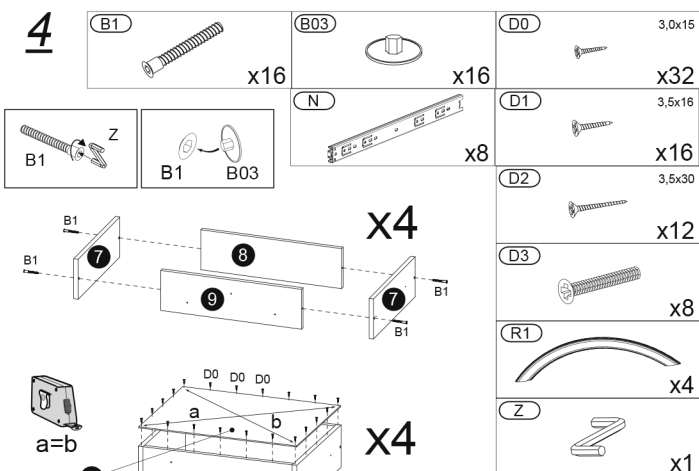





FRONT

7

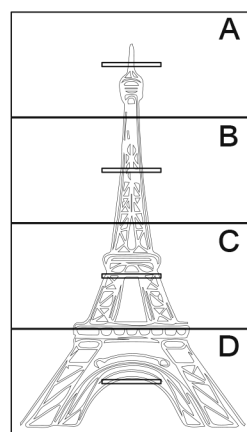

УВАГА:
ФАСАДИ УТВОРЮЮТЬ ОДНЕ
СПІЛЬНЕ ЗОБРАЖЕННЯ.
ВСТАНОВІТЬ ІХ У
ПРАВИЛЬНОМУ ПОРЯДКУ
А-Б-С-Д (ЗВЕРХУ ВНИЗ), ЩОБ
МАЛЮНОК СПІВПАВ.

ATTENTION:
THE DRAWER FRONTS FORM
ONE CONTINUOUS IMAGE.
INSTALL THEM IN THE
CORRECT ORDER A-B-C-D
(TOP TO BOTTOM) TO ALIGN
THE PICTURE PROPERLY.

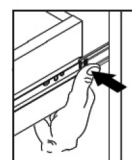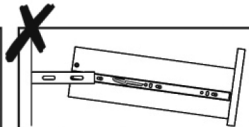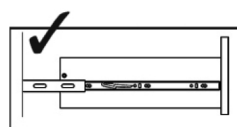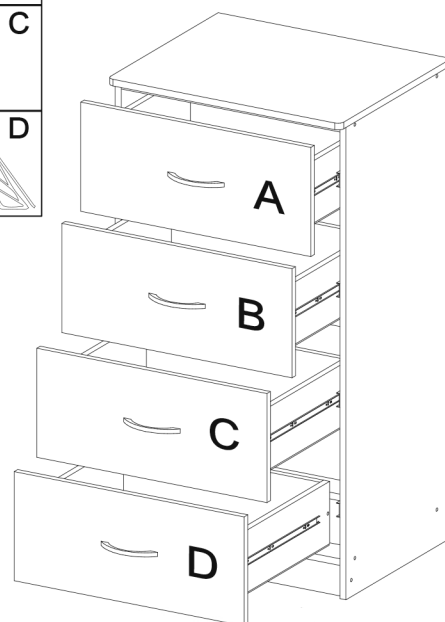

8